


# HVAC/R Directions

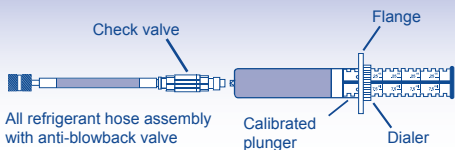

1. To charge the hose assembly and remove the air, first connect the applicator to the hose assembly. When charging the first time, rotate applicator dial 1/2 turn counter clockwise. While depressing the center pin in the anti-blowback valve, depress the calibrated plunger until a small amount of dye exits the hose.
2. Attach hose assembly to the low side fitting of the A/C system.
3. Pre-set the dialer to the amount of dye to be injected into the system (see chart).
4. With the A/C system running, hold the flange between your index and middle fingers and press the plunger with your thumb until the plunger is stopped by the flange.
5. Continue running the system until the dye has mixed thoroughly.
6. Use the UV light to locate leaks.

Application	System size in lbs. of refrigerant	Dye Amount
Small appliance and auto A/C	Up to 4.9 (2.22 kgs.)	.25 oz (7.5 ml)
A/C or refrigerant systems	Up to 25 lbs. (11.34 kgs)	0.5 oz (15 ml)
Larger systems	Above 25 lbs. (11.34 kgs)	0.5 oz (15 ml) per gal. of oil

May cause irritation to eyes and skin.

IF ON SKIN: Wash with plenty of soap and water.

IF SWALLOWED: rinse mouth. Do not induce vomiting.

IF IN EYES: Rinse cautiously with water for several minutes.

Remove contact lenses, if present and easy to do. Continue rinsing. Get medical advice/attention if you feel unwell.

Protected by U.S. Patent Nos: 6,293,319 and 6,186,197

*Syringe not rated for pressures higher than 80 psi*